

6200 SERIES MAGNETO SERVICE PARTS LIST **UNISON**

MAGNETOS

Application Data

Ref. No.	Description	6210	6214	6220	6224	6250	6251	6252	6255	6260	6261	6263	6264	6267	6271	6280	6290	6293	Qty. Used
1.	Cotter pin	M2556	M2556	M2556	M2556	**	**	**	**	**	**	**	**	**	**	M2556	**	**	1
2.	Nut, impulse coupling	M3019	M3019	M3019	M3019	M3019	M3019	M3019	M3019	M3019	M3019	M3019	M3492	M3492	M3019	M3019	M3019	M3019	1
3.	Washer, impulse coupling	M3172	M3172	M3172	M3172	-	-	-	-	-	-	-	-	-	-	M3172	-	-	1
4.	Impulse coupling assembly	M3050	M3089	M3050	M3089	-	M3333	M3333	M3635	-	M3333	-	M3590	M3524	-	M3050	-	-	1
5.	Oil seal	M3062	M3062	M3062	M3062	M3331	M3331	M3331	M3331	M3331	M3331	M3331	M3062	M3062	M3331	M3062	M3331	M3331	1
6.	Pressure vent plug	-	-	M3179	M3179	-	-	-	-	M3179	M3179	M3179	-	-	-	-	-	-	1
7.	Air vent	M1077	M1077	-	-	M1077	M1077	M1077	M1077	-	-	-	M1077	M1077	M1077	M1293	M1077	M1077	1
8.	Frame	M3101	M3102	M3248	M3249	M3542	M3631	M3631	M3631	M3609	M3627	M3609	M3504	M3501	M3553	M3346	M3553	M3553	1
9.	Gasket	-	-	K3303	K3303	-	-	-	-	K3303	K3303	K3303	-	-	-	-	-	-	1
10.	Ball bearing	M3006	M3006	M3006	M3006	M3006	M3006	M3006	M3006	M3006	M3006	M3006	M3006	M3006	M3006	M3006	M3006	M3006	1
11.	Rotor	M3047	M3093	M3047	M3093	M3117	M3327	M3416	M3416	M3117	M3327	M3117	M3496	M3499	M3117	M3047	M3117	M3117	1
12.	Bearing cap assembly	M3485	M3485	M3485	M3485	M3485	M3485	M3485	M3485	M3485	M3485	M3630	M3485	M3485	M3630	M3485	M3630	M3630	1
13.	Bearing cap clamp	M3018	M3018	M3018	M3018	M3018	M3018	M3018	M3018	M3018	M3018	M3018	M3018	M3018	M3018	M3018	M3018	M3018	2
14.	Screw	M3221	M3221	M3221	M3221	M3221	M3221	M3221	M3221	M3221	M3221	M3221	M3221	M3221	M3221	M3221	M3221	M3221	2
15.	Contact point kit - primary	M3081	M3081	M3081	M3081	M3081	M3081	M3081	M3081	M3081	M3081	M3637	M3081	M3081	M3637	M3081	M3637	M3637	1
15.	Contact point kit - secondary	-	-	-	-	-	-	-	-	-	-	M3637	-	-	M3637	-	M3740	M3637	1
16.	Rotor gear	M3828	M3828	M3828	M3828	M3828	M3828	M3828	M3828	M3828	M3828	M3828	M3828	M3828	M3828	M3828	M3828	M3828	1
17.	Cam	M3611	M3611	M3611	M3611	M3611	M3611	M3611	M3611	M3611	M3611	M3611	M3611	M3611	M3611	M3611	M3611	M3611	1
18.	Woodruff key	M2536	M2536	M2536	M2536	M2536	M2536	M2536	M2536	M2536	M2536	M2536	M2536	M2536	M2536	M2536	M2536	M2536	2*
19.	Coil wedge	M3040	M3040	M3040	M3040	M3040	M3040	M3040	M3040	M3040	M3040	M3040	M3040	M3040	M3040	M3040	M3040	M3040	2
20.	Screw	M3020	M3020	M3020	M3020	M3020	M3020	M3020	M3020	M3020	M3020	M3020	M3020	M3020	M3020	M3020	M3020	M3020	2
21.	Coil	M3975	M3975	M3975	M3975	M3975	M3975	M3975	M3975	M3975	M3975	M3975	M3975	M3975	M3975	M3975	M3975	M3975	1
22.	Screw	M2555	M2555	K3303	K3303	M2555	M2555	M2555	M2555	K3303	K3303	K3303	M2555	M2555	M2555	M2555	M2555	M2555	1
23.	Gasket (o-ring)	-	-	K3303	K3303	-	-	-	-	K3303	K3303	K3303	-	-	-	-	-	-	4
24.	Pressure tube fitting	-	-	M3180	M3180	-	-	-	-	M1280	M1280	M1280	-	-	-	-	-	-	1
25.	Air vent with hook	M3084	M3084	-	-	M3084	M3084	M3084	M3084	-	-	-	M3084	M3084	M3084	M3084	M3084	M3084	1
26.	Screw	M3015	M3015	K3303	K3303	M3015	M3015	M3051	M3015	K3303	K3303	K3303	M3015	M3015	M3015	M3015	M3015	M3015	3
27.	Housing distributor	M3002	M3002	M3002	M3002	M3002	M3002	M3002	M3002	M3002	M3002	M3599	M3002	M3002	M3599	M3002	M3681	M3599	1
28.	Capacitor	K3984	K3984	K3984	K3984	K3984	K3984	K3984	K3984	K3984	K3984	K3984	K3984	K3984	K3984	K3984	K3984	K3984	1
29.	Distributor block & gear assembly	K3823	K3823	K3823	K3823	K3823	K3823	K3823	K3823	K3823	K3823	K3823	K3823	K3823	K3823	K3823	K3823	K3823	1
30.	Screw	M3021	M3021	M3021	M3021	M3021	M3021	M3021	M3021	M3021	M3021	M3021	M3021	M3021	M3021	M3021	M3021	M3021	2
31.	Carbon brush	M3215	M3215	M3215	M3215	M3215	M3215	M3215	M3215	M3215	M3215	M3215	M3215	M3215	M3215	M3215	M3215	M3215	1
32.	Washer	M2532	M2532	K3303	K3303	M2532	M2532	M2532	M2532	K3303	K3303	K3303	M2532	M2532	M2532	M2532	M2532	M2532	1

* models 6210, 6214, 6220, 6224, 6267 and 6280 use qty. 1 Woodruff key

** not supplied by Slick